 


Aberdeen Series™
5 Shelf Bookcase
Model No. AB5S36




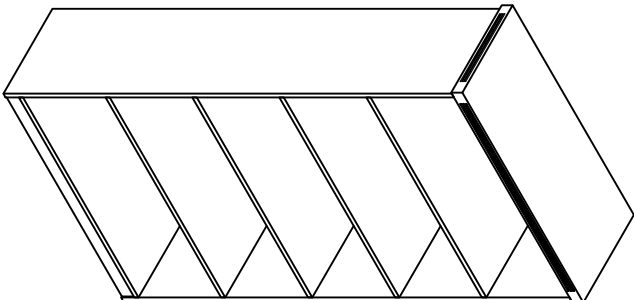








ASSEMBLY INSTRUCTIONS

    CALL 1-800-822-8037 FOR ASSISTANCE

P/N **AB5S36** REV 05 02/19/08

 PARTS LIST

| Name | Part | Qty. | Spare Qty | Name | Part | Qty. | Spare Qty |
|----------|---|-----------|-----------|-----------|---|-----------|-----------|
| A |  REALS004 Wood Dowel HB | 31 | 2 | F |  REALS008 Corner Bracket w/ Glide HB | 4 | |
| B |  REALS003 Cam Post HB | 26 | 2 | G |  REALS005 Ø4 x 16mm HB | 24 | 2 |
| C |  REALS001 Cam Fastener HB | 26 | 2 | H |  REALS104 Grommet HB | 2 | |
| D |  REALS102** Cam Sticker HB | 26 | 2 | H1 |  REALS230** Cap HB | 4 | |
| E |  REALS009 Shelf Support Pin HB | 12 | 1 | |  AB5S36HB | | |

Items with HB are in hardware box.

**Denotes Color Code


PARTS LIST

| Name | Part | Qty. | Name | Part | Qty. |
|-----------|-----------------------------------|----------|-----------|--------------------------------------|----------|
| J* | ABS36J** Top | 1 | N* | ABS36N** Fixed Shelf | 3 |
| K* | ABS36K** Bottom | 1 | P | AB5S36P** Left Side Panel | 1 |
| L* | ABS36L** Toe Kick | 1 | Q | AB5S36Q** Right Side Panel | 1 |
| M* | ABS36M** Moveable Shelf | 1 | R* | AB5S36R** Back Panel | 1 |

* Available in Cherry (LCR) or Mocha (LDC) finish only.


**Denotes Color Code

 - 1
- Insert Wood Dowels (A) into Bottom (K) and Fixed Shelf (N). Insert Cams (C) into Bottom (K) and Fixed Shelf (N). Install Cam Posts (B) into threaded inserts in Back Panel (Q). Attach Back Panel (Q) to Bottom (K) and Fixed Shelf (N) by turning Cams (C).

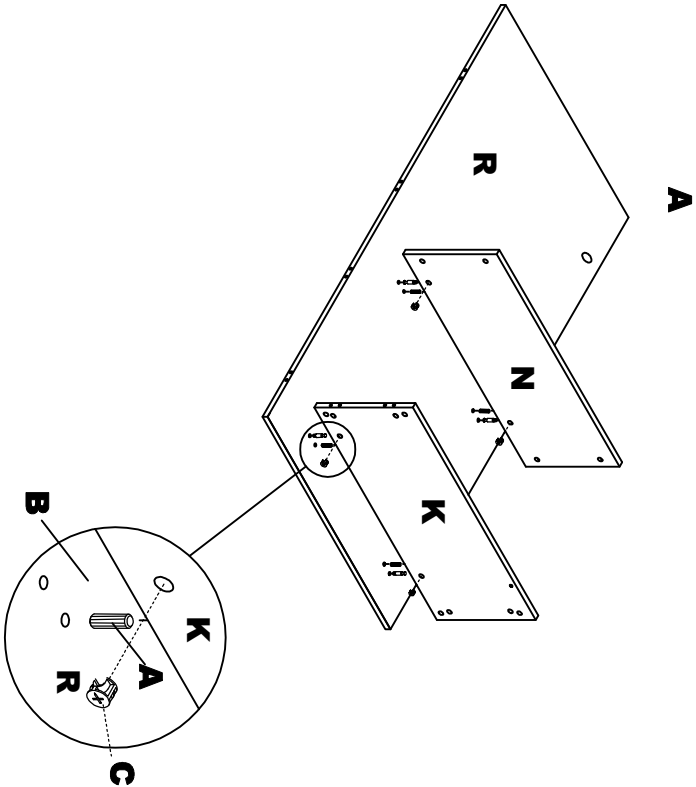

2

 Insert Wood Dowels (A) into Back Panel (R), Bottom (K), Fixed Shelf (N), and Toe Kick (L). Insert Cambs (C) into Back Panel (R), Fixed Shelf (N), and Bottom (K). Install Cam Posts (B) into threaded inserts in Right Side Panel (Q). Press Toe Kick (L) to Bottom (K). Attach Right Side Panel (Q) to Back Panel (R), Fixed Shelf (N), and Bottom (K) by turning Cambs (C).

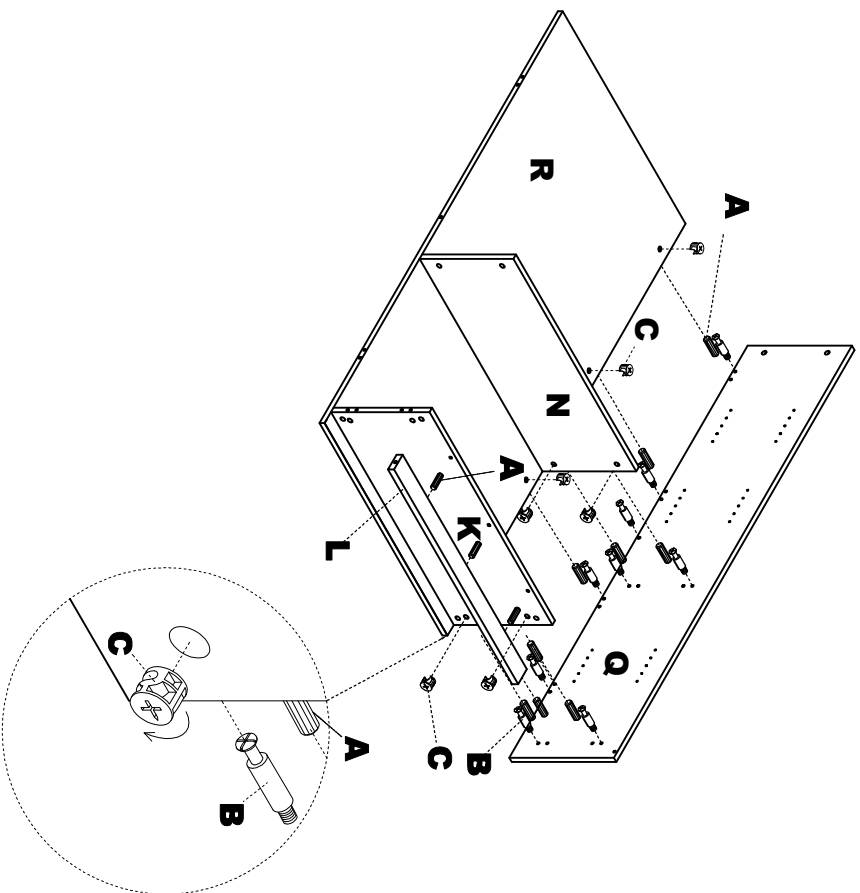


NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.

4

3

 
Insert Wood Dowels (A) into Back Panel (R), Bottom (K), Fixed Shelf (N), and Toe Kick (L). Insert Cambs (C) into Back Panel(R), Bottom (K), and Fixed Shelf (N). Install Cam Posts (B) into threaded inserts in Left Side Panel (P). Attach Left Side Panel (P) to Back Panel (R), Fixed Shelf (N), and Bottom (K) by turning Cambs (C).

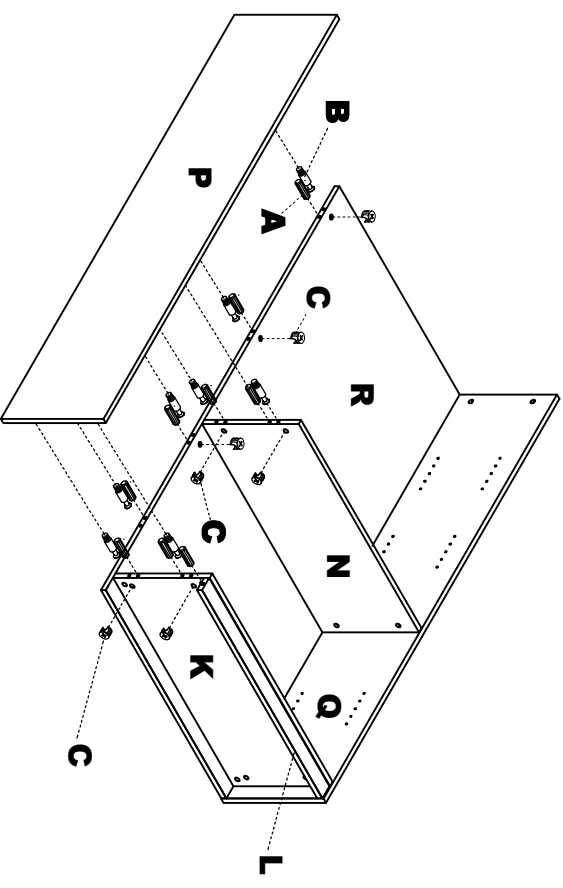

5


4

 Insert Wood Dowels (A) into Back Panel (R) and Side Panels (P & Q). Insert Cam Posts (C) into Back Panel (R) and Side Panels (P & Q) . Install Cam Posts (B) into threaded inserts in Top (J). Attach Top (J) to Back Panel (R) and Side Panels (P & Q) by turning Cam Posts (C).

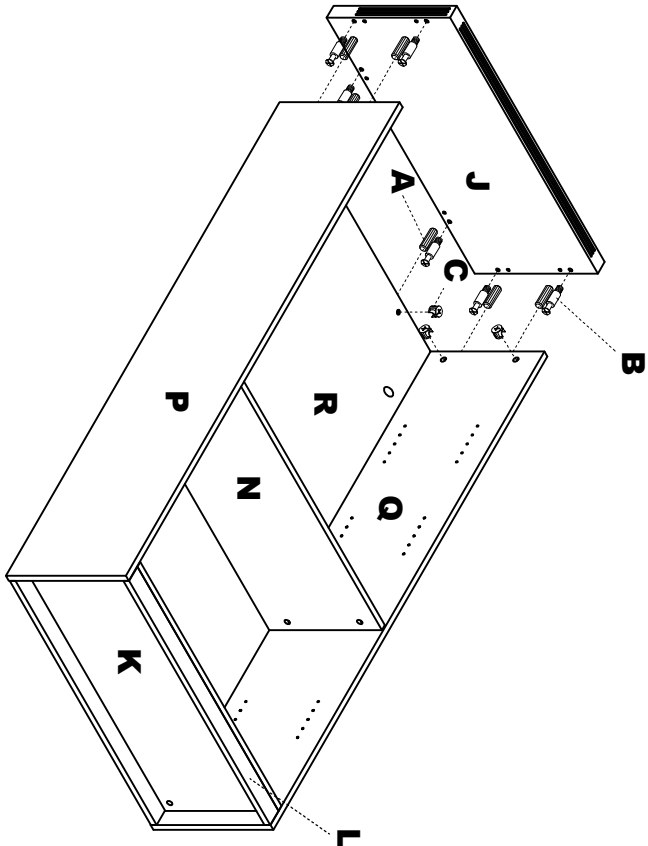


5

 Attach Corner Brackets with Glides (F) using Screws (G).

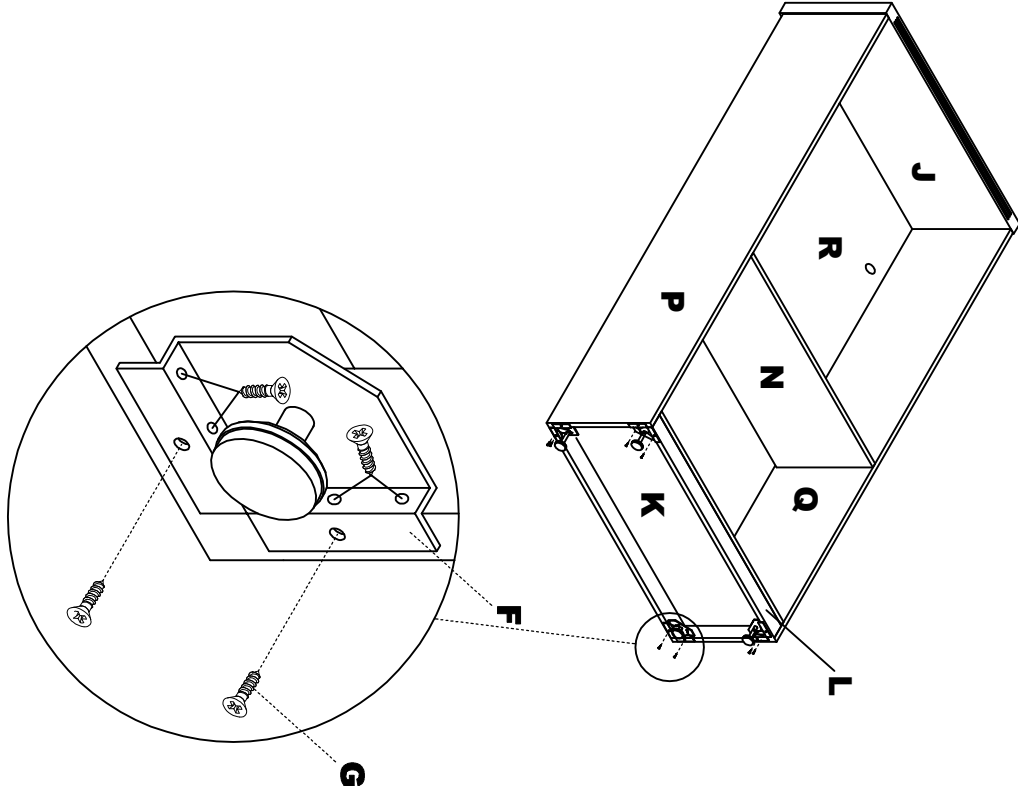

6

 
Install Shelf Support Pins (E). Insert Grommets (H) into Back Panel (R). Apply Cam Stickers (D) over exposed Cams (C). Insert Caps (H1) into adjustment holes for levels.

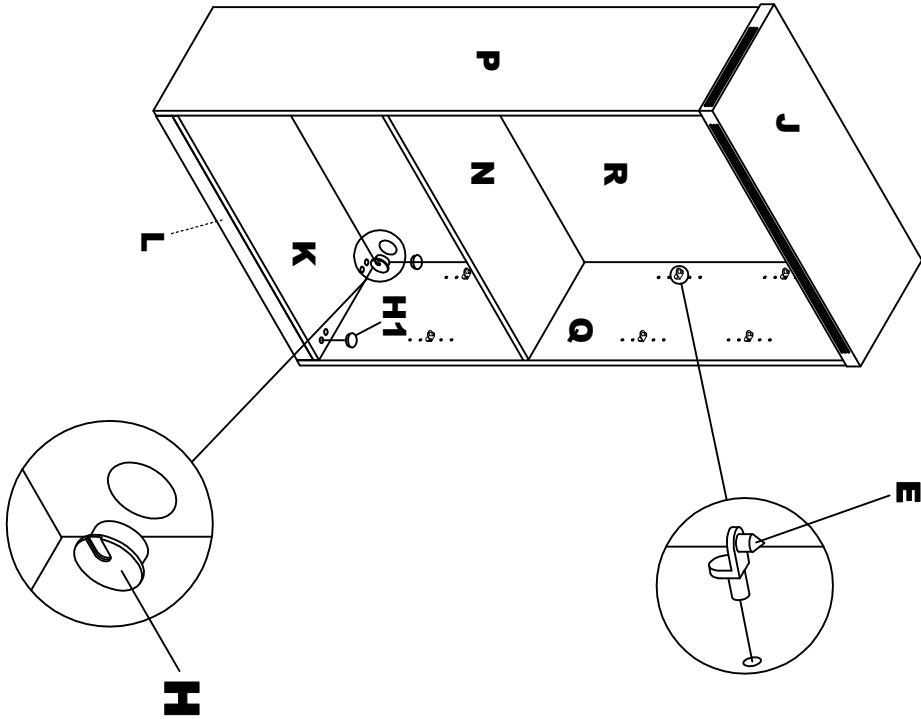

8

7

 Install Shelves (M).

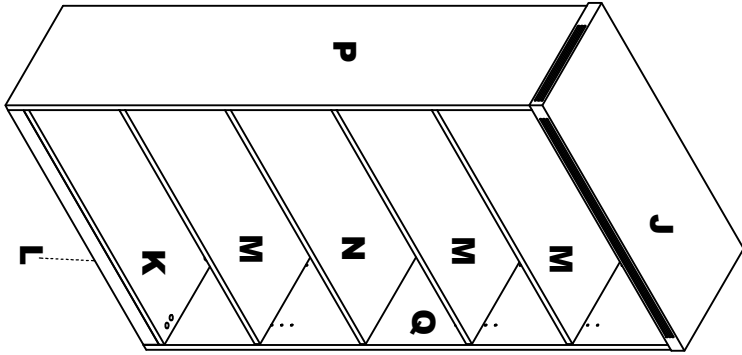

9