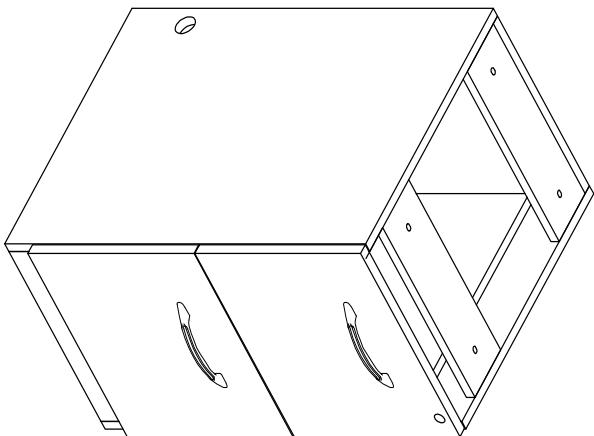








**Aberdeen Series™**  
**Credenza File/File Pedestal**  
**Model No. AFF20**



**ASSEMBLY INSTRUCTIONS**  
**CALL 1-800-822-8037 FOR ASSISTANCE**

P/N **AFF20** REV 06 07/10/10

# PARTS LIST

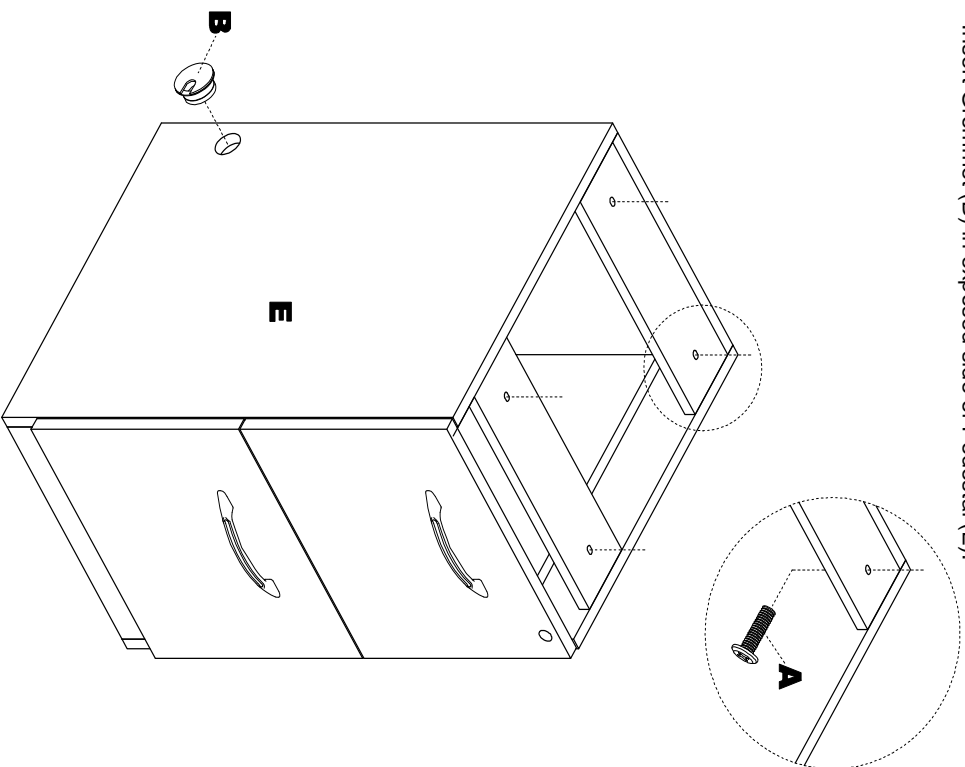
Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
<b>A</b>	 <b>REALS124</b> M6 x 35mm <b>HB</b>	<b>4</b>	<b>1</b>	<b>D</b>	 <b>HB</b> Keys	<b>1</b>	
<b>B</b>	 <b>REALS104</b> Grommet <b>HB</b>	<b>1</b>		<b>E</b>	 <b>AFF20**</b> Pedestal	<b>1</b>	
<b>C</b>	 <b>REALS060</b> 1 Bar w/2 Caps	<b>2</b>					
	 <b>APEDHB</b>						

Items with HB are in hardware box.








\*\*Denotes Color Code

- 1** Remove drawers and attach Pedestal (E) to underside of Table using Screws (A).  
- OR -  
Slide Pedestal (E) under worksurface and adjust levelers as appropriate.

Insert Grommet (B) in exposed side of Pedestal (E).




## Pre-Installed Replacement Parts List

Part	Included Qty.	Part	Included Qty.
 <b>REALS191</b> Handle w/ Screws	2	 <b>AFFDF**</b> Drawer Fronts - Set of 2	1 *
 <b>REALS008</b> Corner Bracket w/ Glide	4	 <b>REALS307</b> Drawer Slide 16" - Pair 	2
 <b>REALS005</b> Ø4 x 16mm Corner Bracket Screws	24	 <b>REALS121</b> Ø3 x 14mm Drawer Slide Screws	32

\* Available in Cherry (LCR) or Mocha (LDC) finish only.

\*\*Denotes Color Code

 Previous Drawer Slide Was REALS054. Change effective July 10, 2010