
## IMPORTANT NOTICE: HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

MODEL: B9536

MODEL. D3030				
(1)x1		(2)x1		(3)x1
		Arm-Left		Arm-Right
(4)x1		(5)x1		
(A)X2	$\Phi$	M6 X 12	SCREWS FOR BOTTOM TUBE	
(B)X2	<del>()</del>	M6 X 36	SCREWS FOR TOP TUBE AND SEAT	
(C)X2	фшш	M6 X 18	SCREWS FOR BACKREST	

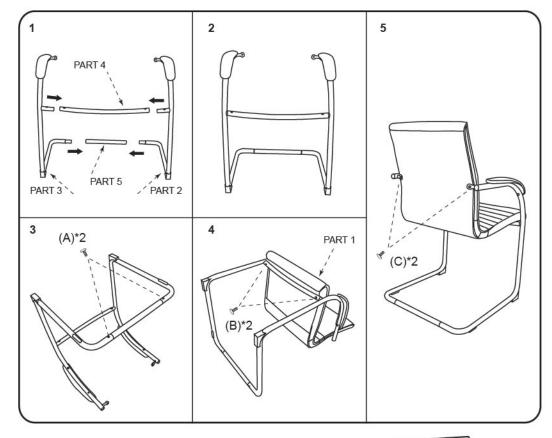

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

